


Adjust the diffuser 10-15 degrees towards the exterior of the building. Confirm diffuser adjustment after power has been supplied to the Air Barrier. See owners manual.

Notes:

- 1) Installer is responsible for securely and structurally mounting the Air Barrier
- 2) Unit is capable of spanning opening without the need for intermediate support.
- 3) Customer is responsible for providing/ensuring building structure will support the unit.
- 4) Welded Steel Frame Cabinet, Intake Screen, Diffuser, Belt Guard, Wall Mounts and Slider are Polyester Powder Coated ASA 49.
- 5) NEMA 1 5 hp, Lockable Soft Starter Control Panel with Individual Motor Overload Protection, Keyed On/Off Switch-Key removable in both positions Photo Sensor w 5' of lead to be field wired to control panel

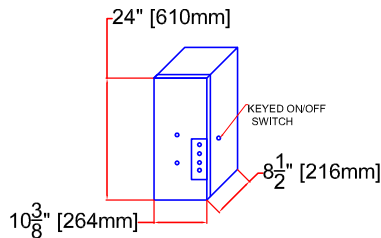

CSA & CWB Certified

ENERSHIELD INDUSTRIES LTD
16821-113 AVENUE
EDMONTON, ALBERTA T5M 2X2
 PH (780) 482-4662 FAX (780) 482-4074
 E-mail: info@enershield.ca
 www.enershield.ca

DSH-72 Right Hand Motor				DURASHIELD-HD	DSH-72
Voltage 208V/3/ 60Hz	Voltage 460V/3/ 60Hz	Voltage 575V/3/ 60Hz	Blowers	Air Velocity (fpm) (m/s)	5500/27.9
Motor(s) 1 @ 5 Hp, 1800 RPM, TEFC, IP55, VFD Compatible FLA 14.4	Motor(s) 1 @ 5 Hp, 1800 RPM, TEFC, IP55, VFD Compatible FLA 6.5	Motor(s) 1 @ 5 Hp, 1800 RPM, TEFC, IP55, VFD Compatible FLA 5.2	3	Air Volume (cfm) (l/s)	9675 / 4566
				Total hp/watts	5/3730 W
				Weight lbs/Kg	390 / 177